Instruction Sheet Model LS9128

LUXOR

Customer Service Department 2245 Delany Rd Waukegan, IL 60087 Ph: 847-244-1800 * 800-323-4656 Fax: 847-244-1818 * 800-327-1698



Parts List


Wood top = 1
Right leg = 1
Left leg = 1
Base = 1
Upper support = 1
Tension knob = 1
Tilt guide knob = 1
Tilt guide = 1
Plastic collar = 1

Paper guard = 1
Caster with brake = 2
Caster without brake = 2
Inner plastic collar = 1
Allen wrench = 1
1/2" bolt = 12
Locking nut = 1
Washer = 1
Washer (large) = 1

Step 1


Identify parts.

Attach the tilt guide to the upper support using 1/2" bolt, one washer and one locking nut.

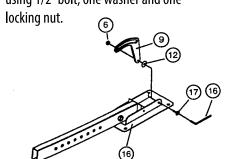


Step 2

Insert the shorter threaded knob and one washer through the tilt guide and into the threaded hole on the upper support.

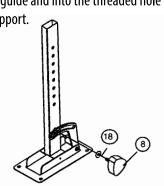


Step 3

Align the four holes on the upper support to the four holes on the top and bolt down with 1/2" bolts. Attach paper guard to the two threaded holes on the wood top using two 1/2" bolts.

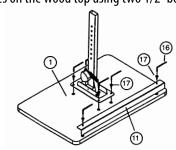


Step 4

Slide the locking collar and the inner plastic collar onto the upper support.

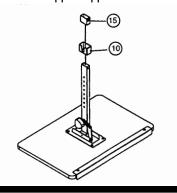


Step 5

Align the inner plastic collar to the hole on the bottom of the upper support and attach with 1/2" bolt.

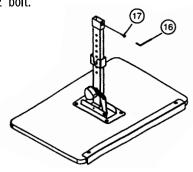


Step 6

Install casters to the right and left legs. Casters with brake go opposite of the two holes on the side of the legs.

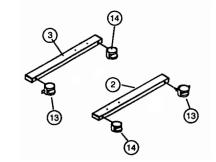


Step 7

Align the two holes on the left and right legs to the two holes on the leg support on the base. Bolt down using four - 1/2" bolts.

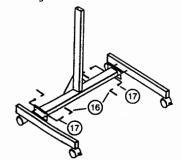


Step 8

Slide assembled top half onto the base. Align hole on the upper support to the threaded hole on the base to desired height and tighten down with tension knob.

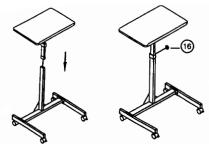

Parts List

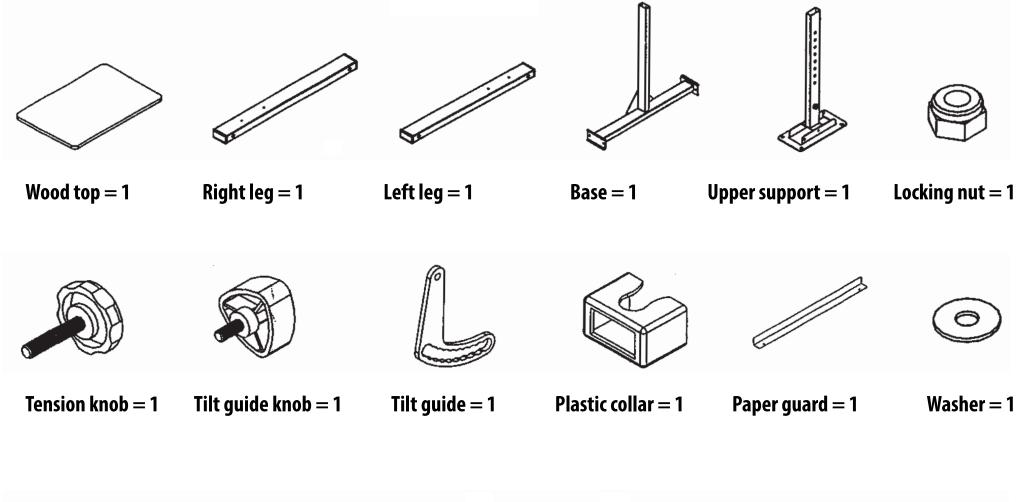




Caster = 2 (with brake)



 Caster = 2 (without brake)




Inner plastic collar = 1



Allen wrench = 1



 1/2" bolt = 12



Washer = 1 (large)