


Using Allen wrench **F** and a $\frac{1}{2}$ or 13mm Wrench, attach the top shelf to the tube frames with 4 screws **C**, 4 corner brackets **D** and 4 locking nuts **E**.

2

4


Repeat Step 1 for the Middle and Bottom shelves

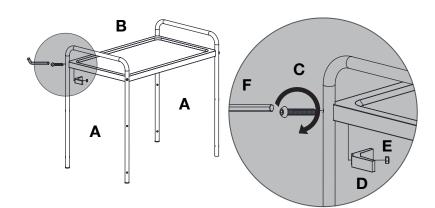

Thread the adjustment nut **K** on casters H & J until tight. Push the plastic bumper **G** onto frame **A**, and thread the casters **H** & **J** to frame **A**. Secure with Wrench.

3

Α

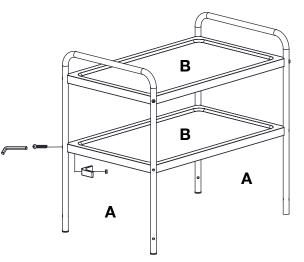

Place the cart on a level surface and tighten all of the hardware using the Allen wrench and a $\frac{1}{2}$ or 13mm Wrench.

